## Tail Lamps with LEDs

From January 2011




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



## **J**393 **(K)** T17r T17s /12 **∯**T17r T32i /31 0.5 0.5 0.5 0.75 0.75 0.75 0.75 0.5 gr/ge gr/sw ws/bl sw/ws sw/ws ar/ws bl/ws sw/bl T6s T6bm T6bm /3 T6bm T6bm **Ż**¼ M80 ݼ M86 Ÿ¼ M49 Ÿ¼ M4 M16 ₽<sub>T6bm</sub> 57 /1 31 \*2 0.5 (382) = white (387) = black or private or commercial purposes, in part or in whole,387 Protected by copyright. Copying = red UDI AG. AUDI AG does not guarantee or accept any liab permitted unless authorised by = red with respect to the correctne of information in this document. Copyright by AUDI AG. = brown = green = blue = grey = lilac (50) 51 = lilac = yellow 11 12 13 = orange or [4G2-052020420] rs = pink

## Comfort System Central Control Module, Left Rear Turn Signal Bulb 2, Left Brake Lamp Bulb 2

- J393 Comfort System Central Control Module
- L46 Left Rear Fog Lamp Bulb
- M4 Left Tail Lamp Bulb
- M6 Left Rear Turn Signal Bulb
- 9 Left Brake Lamp Bulb
- M16 Left Back-Up Lamp Bulb
- 149 Left Tail Lamp Bulb 2
- M80 Left Rear Turn Signal Bulb 2
- 186 Left Brake Lamp Bulb 2
- T6bm 6-Pin Connector
- T6s 6-Pin Connector
- T17r 17-Pin Connector
- T17s 17-Pin Connector
- T32i 32-Pin Connector
- 50 Ground Connection in Luggage Compartment, Left
- 51 Ground Connection in Luggage Compartment, Right
- (382) Ground Connection 17 (in Main Wiring Harness)
- (387) Ground Connection 22 (in Main Wiring Harness)
  - \* Sedan
  - \*2 Not for USA

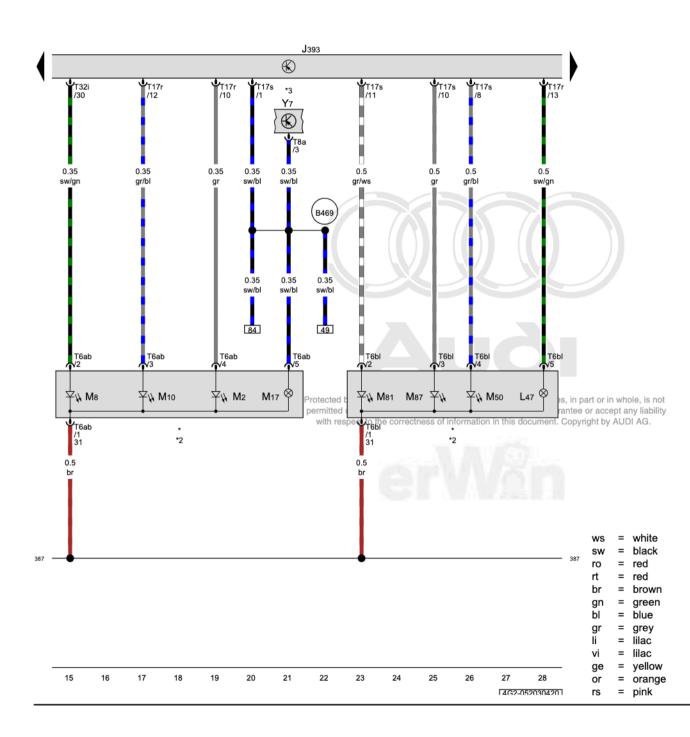

Comfort System Central Control Module, Right Rear Fog Lamp Bulb, Right Tail Lamp Bulb 2, Right Rear Turn Signal Bulb 2, Right Brake Lamp Bulb 2

- J393 Comfort System Central Control Module
- L47 Right Rear Fog Lamp Bulb
- M2 Right Tail Lamp Bulb
- M8 Right Rear Turn Signal Bulb
- M10 Right Brake Lamp Bulb
- M17 Right Back-Up Lamp Bulb
- M50 Right Tail Lamp Bulb 2
- M81 Right Rear Turn Signal Bulb 2
- M87 Right Brake Lamp Bulb 2
- T6ab 6-Pin Connector
- T6bl 6-Pin Connector
- T8a 8-Pin Connector
- T17r 17-Pin Connector
- T17s 17-Pin Connector
- T32i 32-Pin Connector
- Y7 Automatic Dimming Interior Rearview Mirror
- (387) Ground Connection 22 (in Main Wiring Harness)
- (B469) Connection 5 (in Main Wiring Harness)
  - \* Sedan
  - 2 Not for USA
  - \*3 Refer to Applicable Standard Equipment Wiring Diagram

[4G2-052040420]


rs


= pink

Comfort System Central Control Module, Left Rear Fog Lamp Bulb, Left Rear Side Marker Lamp Bulb, Left Brake Lamp/Turn Signal/Tail Lamp Bulb, Left Brake Lamp/Turn Signal/Tail Lamp Bulb 2, Left Brake Lamp/Turn Signal Bulb 2

```
Comfort System Central Control Module
     Left Rear Fog Lamp Bulb
M16 Left Back-Up Lamp Bulb
     Left Rear Side Marker Lamp Bulb
     Left Brake Lamp/Turn Signal Bulb
     Left Brake Lamp/Turn Signal/Tail Lamp Bulb
     Left Brake Lamp/Turn Signal/Tail Lamp Bulb 2
      Left Brake Lamp/Turn Signal Bulb 2
     Left Brake Lamp/Turn Signal Bulb 3
T6bn 6-Pin Connector
      6-Pin Connector
T6r
T17r 17-Pin Connector
T17s 17-Pin Connector
T32i 32-Pin Connector
387
      Ground Connection 22 (in Main Wiring Harness)
```

- \* Sedan
- \*2 For USA Only

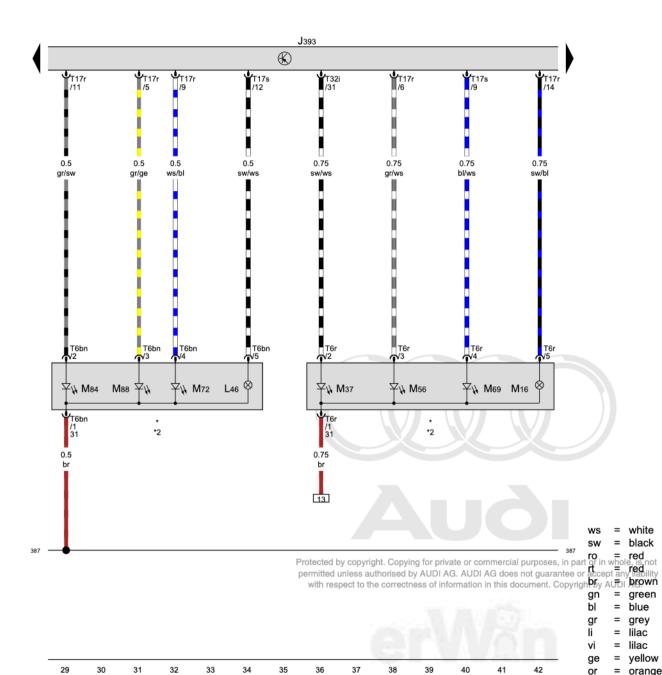

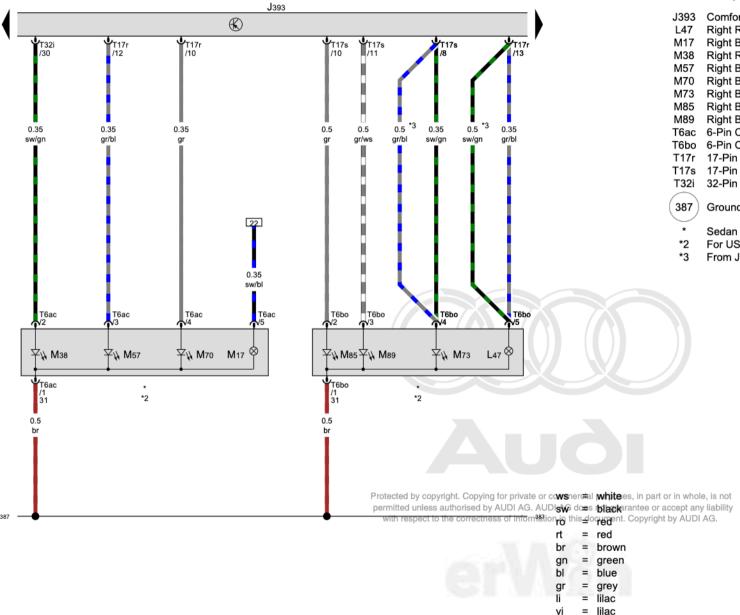

53

## Comfort System Central Control Module, Right Rear Side Marker Lamp Bulb

- J393 Comfort System Central Control Module
- Right Rear Fog Lamp Bulb
- M17 Right Back-Up Lamp Bulb
- Right Rear Side Marker Lamp Bulb
- Right Brake Lamp/Turn Signal Bulb
- M70 Right Brake Lamp/Turn Signal/Tail Lamp Bulb
- Right Brake Lamp/Turn Signal/Tail Lamp Bulb 2
- M85 Right Brake Lamp/Turn Signal Bulb 2
- Right Brake Lamp/Turn Signal Bulb 3
- T6ac 6-Pin Connector
- T6bo 6-Pin Connector
- T17r 17-Pin Connector
- T17s 17-Pin Connector
- 32-Pin Connector
- Ground Connection 22 (in Main Wiring Harness)

= yellow

= orange


= pink

or

rs


4G2-052050420 l

- For USA Only
- From June 2011

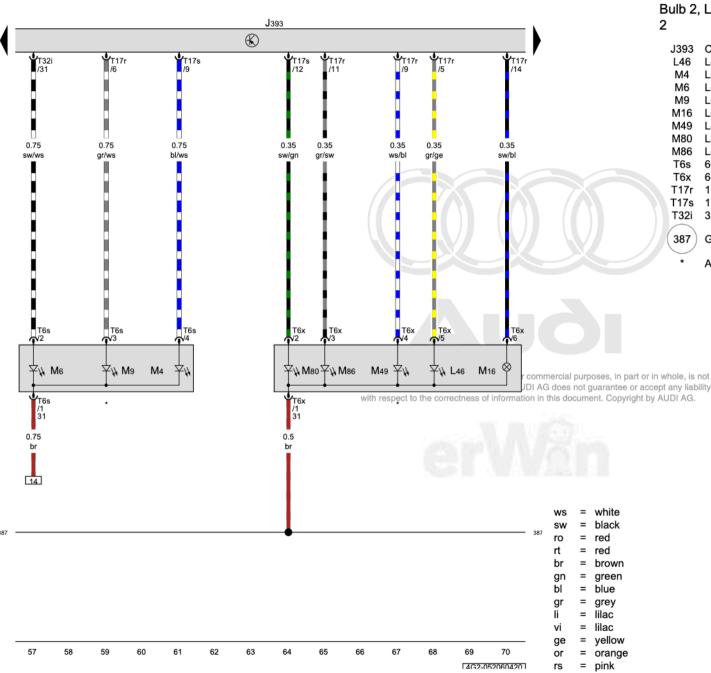

Comfort System Central Control Module, Left Tail Lamp Bulb 2, Left Rear Turn Signal Bulb 2, Left Brake Lamp Bulb

- J393 Comfort System Central Control Module Left Rear Fog Lamp Bulb Left Tail Lamp Bulb Left Rear Turn Signal Bulb
- Left Brake Lamp Bulb
- M16 Left Back-Up Lamp Bulb
- Left Tail Lamp Bulb 2 Left Rear Turn Signal Bulb 2
- Left Brake Lamp Bulb 2
- 6-Pin Connector 6-Pin Connector
- T17r 17-Pin Connector
- T17s 17-Pin Connector
- 32-Pin Connector
  - Ground Connection 22 (in Main Wiring Harness)
- Avant

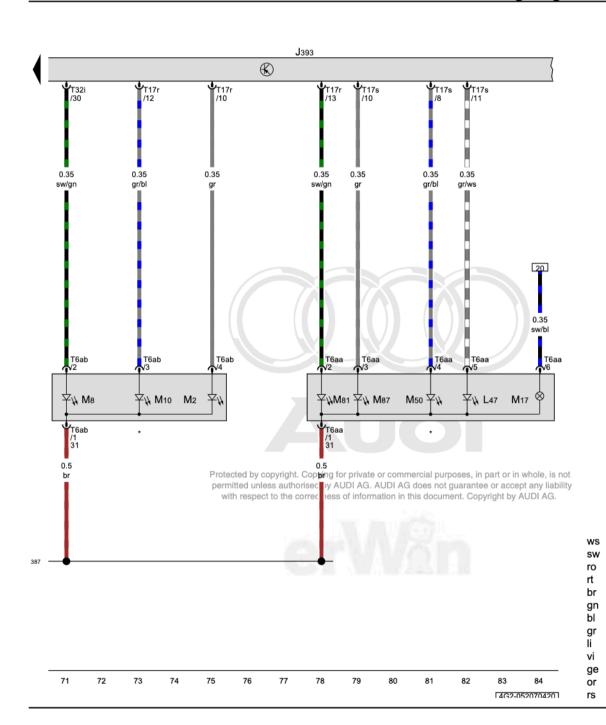

Comfort System Central Control Module, Right Back-Up Lamp Bulb, Right Tail Lamp Bulb 2, Right Rear Turn Signal Bulb 2, Right Brake Lamp Bulb 2

```
J393 Comfort System Central Control Module
      Right Rear Fog Lamp Bulb
      Right Tail Lamp Bulb
      Right Rear Turn Signal Bulb
M10 Right Brake Lamp Bulb
      Right Back-Up Lamp Bulb
      Right Tail Lamp Bulb 2
      Right Rear Turn Signal Bulb 2
      Right Brake Lamp Bulb 2
T6aa 6-Pin Connector
T6ab 6-Pin Connector
T17r 17-Pin Connector
T17s 17-Pin Connector
T32i
      32-Pin Connector
387
      Ground Connection 22 (in Main Wiring Harness)
```

Avant

= white = black = red = red = brown = green = blue = grey = lilac = lilac = yellow

= orange

= pink